

Great for low voltage landscape lighting and sprinkler systems



INSTALLATION INSTRUCTIONS

IMPORTANT: Turn off power before installing or removing connector. Product to be used in accordance with local and national codes.

- 1. Strip wires 5/16"; #16 / #18 stranded strip 3/8".
- 2. Align frayed strands or conductors.
- Hold stripped wires together with ends even (lead stranded wires slightly); pre-twisitng unnecessary.
- 4. Push wires firmly into connector; screw on. Fig. 1
- 5. Insert the splice to the bottom of the sealant filled tube. Fig. 2
- 6. Position wires into wire channels. Fig. 3
- 7. Wipe any sealant around opening and conductors and close lid. Fig. 4

To be sold only with installation instructions.

GTSR^{™ -} Direct Bury Grease Filled Tube with Strain Relief with Orange Nut

Catalog #	Selling Unit
20205	Bag of 25


PRODUCT SPECIFICATIONS & MEASUREMENTS


Max. Voltage: 50V max. Connector Size: 2 23/32" x 1 1/2" Wire Type: Copper/Copper Wire Range: Min #22/Max #14

MEASUREMENTS:

A - 2.71" B - 0.94" C - 1.50"

D - 0.60"

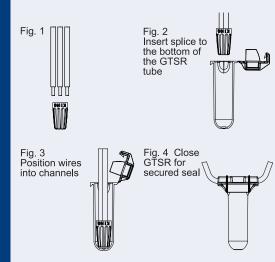

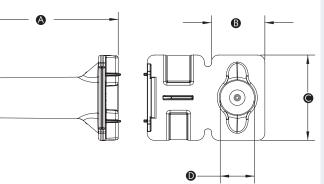

Selected 50V Wire Combinations

2 #14 Solid or Stranded	2 - 3 #16 Solid or Stranded
2 - 4 #18 Solid or Stranded	2 #14 w/1 #18 Solid or Stranded
1 #16 w/1 - 4 #18 Solid or Stranded	3 #18 w/1 or 2 #20 or #22 Solid or Stranded

Contact factory for a complete list of wire combinations at 800.633.0232.

MADE IN USA OF US AND FOREIGN PARTS



www.kinginnovation.com (P) 800.624.4320 (F) 636.519.5410